

EXPLORER 5075GX

Auto-Deploy Fly-Away System for Inmarsat GX

Quick guide

Introduction

This quick guide describes the unpacking and the assembly of the antenna. On the next page you find information how to get on the Internet and how to download the full user and installation manual.

Assembly

The EXPLORER 5075GX antenna ships from the factory with pre-set and calibrated position feedback, limit sensing, limit switches, and motor speeds.

1. Unpack the electronics enclosure with the antenna positioner.
2. Take the RF assembly out of the case, handle it carefully.

Do not grab the assembly by the feed horn. The feed's subreflector can be easily damaged.

3. Place the electronics enclosure upon level ground and deploy the two support legs.

Do not cover the GNSS (GPS, Glonass, etc.) module located in the top of the electronics enclosure.


Do not cover the WLAN module. It sits near the front of the electronics enclosure.

4. Position the antenna:
Northern hemisphere - The display faces north
Southern hemisphere - The display faces south
- High wind conditions:** Anchor the tripod to the ground. Add extra weight to the support legs, or insert stakes through holes on the support feet.
5. Turn the black knobs to move the feet up and down to level the base and achieve stability.
6. Retract the two thumbscrews on the mounting block which are located on the elevation arms.
7. Insert the RF assembly into the mounting block.
8. Tighten the two thumbscrews.
9. Release the four locking mechanisms on the reflector hub on the RF assembly.
10. Unpack the four panels.
11. Insert the two bottom panels and latch them along the edge of each panel and secure the locking mechanism at the center hub.
12. Insert and latch the two upper panels and secure the locking mechanism at the center hub.

①



②

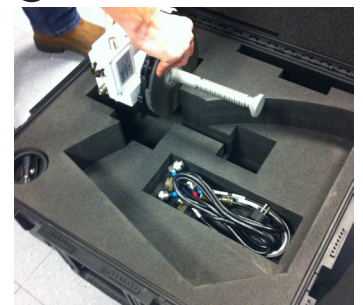

③



④

⑤

⑥



⑦


⑧



⑨



⑪

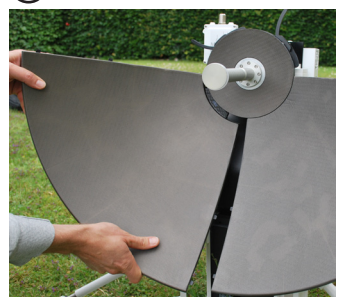

⑫



⑫



13

13. Connect the cables:

- BUC power (Gray)** cable to MIL connector
- Transmit (Red, Tx)** cable IFL RG-6 to BUC Transmit port
- Receive (Blue, Rx)** cable IFL RG-6 to LNB Receive port
- Power cable** to the electronics enclosure.



Power on

1. Press the **On/Off** button. The system auto-acquires the network within five minutes.
2. When the connection is established, the display shows **ACQUISITION OK**.
3. Wait until the field **MDM**: in the upper status line shows **NETOK**.



Internet

1. Use shielded LAN cables to connect a PC to **LAN2, LAN3** or **LAN4** for Internet, see documentation from the service provider.
2. Start a browser.



Download of the User & installation manual

You can download the user & installation manual at www.cobham.com/satcom, Service and Support, COBHAM SYNC Partner Portal or directly from the terminal.

To download the manual from the terminal do as follows:

1. Connect a PC to LAN port 1 (shielded LAN cable).
2. Open your browser and access the web interface at <http://192.168.0.1> (default).
3. Enter the user name **guest** and the password **guest**. The **DASHBOARD** is displayed.
4. Click **HELPDESK** and then **Support**.
5. Click the link **Download manual**.



Administrator login - first time

To log in as an administrator do as follows:

1. Connect a PC to LAN port 1 (shielded LAN cable).
2. On the keypad, push and hold the left arrow key for 5 seconds.
3. Wait for the short display of **Local administration** followed by the event **0807F-0 WARNING Local administration enabled**. This gives you temporary administrator access for 1 hour or until next restart.
4. Open your browser and access the web interface at <http://192.168.0.1> (default).
5. Enter the user name **admin** (no password is required). The **DASHBOARD** is displayed.
6. Enter an admin password at **ADMINISTRATION > User login**, section **Change Login**.



Any responsibility or liability for loss or damage in connection with the use of this product and the accompanying documentation is disclaimed by Thrane & Thrane A/S. The information in this manual is provided for information purposes only, is subject to change without notice and may contain errors or inaccuracies. Manuals issued by Thrane & Thrane A/S are periodically revised and updated. Anyone relying on this information should acquire the most current version e.g. from www.cobham.com/satcom, Cobham SYNC Partner Portal, or from the distributor. Thrane & Thrane A/S is not responsible for the content or accuracy of any translations or reproductions, in whole or in part, of this manual from any other source. In the event of any discrepancies, the English version shall be the governing text.
Thrane & Thrane A/S is trading as Cobham SATCOM.